


Jackpot PC2 connects to IP of Roulette1 192.168.33.68(or, if you have chosen to connect via internal router, it connects directly to Roulette1 internal HUB-blue connection) Jackpot PC2 connects to IP of Roulette2 192.168.33.68(or, if you have chosen to connect via internal router, it connects directly to Roulette2 internal HUB-blue connection) Jackpot PC2 connects to IP of RouletteN 192.168.33.68(or, if you have chosen to connect via internal router, it connects directly to RouletteN internal HUB-blue connection)

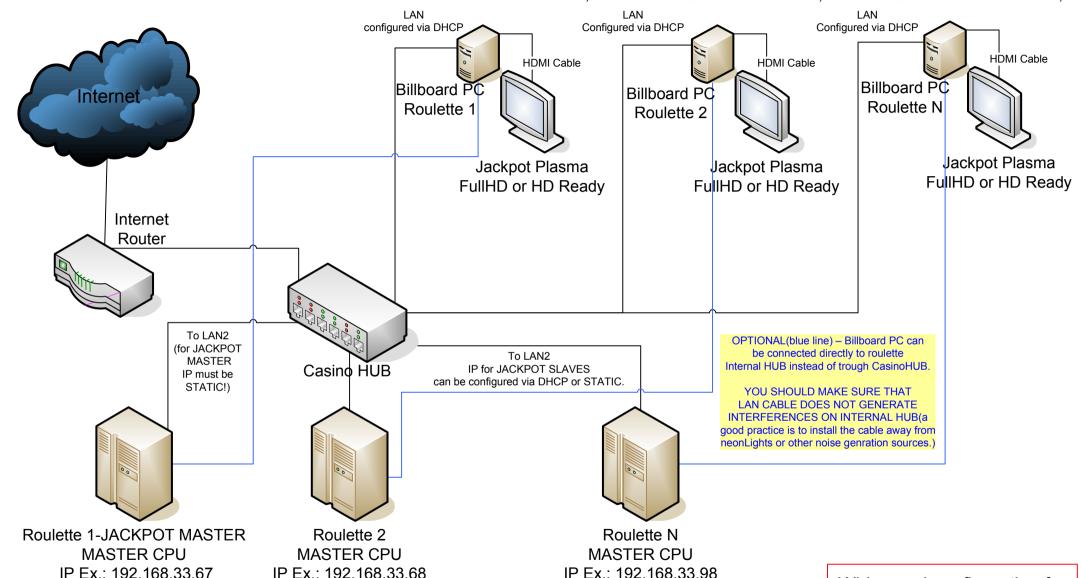

Roulette 1 will be confugured as JACKPOT MASTE. No configuration is needed – each roulettee is JACKPOT MASTER is by default. Roulette(s) 2 until N have to be confugured as JACKPOT SLAVE(s). In file /RouletteMaster/RouletteTunnel/RepetitorTunnel.conf the IP of JACKPOT MASTER has to be entered under serverhost keyword(ex.: serverhost 192.168.33.67). And in Pope->GAME_CONFIGURATION string value for parameter JACKPOT_DB_SRV has to be set to '127.0.0.1:3591'

Wiring and configuration for multiple roulettes on sigle JACKPOT.